
Early Modern Iberian Ships Tentative Glossary

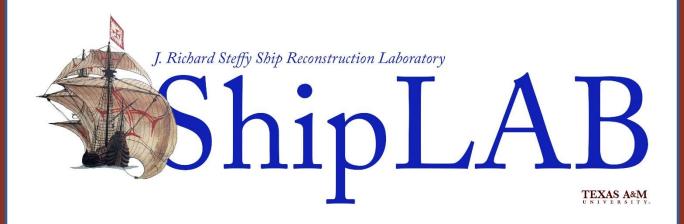

Part 1 – Toponomy and Fittings

Filipe Castro, Marijo Gauthier-Bérubé, Massimo Capulli, Maria João Santos, Ricardo Borrero, Nicolás Ciarlo, Ivor Mollema







Fonds de recherche Société et culture





Marie Curie EU Grant PITN-2013 GA607545



EU Horizon 2020 No. 727153



GROPLAN Industrial Research Project funded by ANR

This glossary is intended for students of nautical archaeology around the world, and focuses mainly on European early modern ships.

In this first volume we try to present the designations of ship's spaces and fittings. This is a work in progress and we apologize for the mistakes and typos, and want to thank you in advance for comments and corrections.

Country abbreviations:

PT – Portugal

SP-Spain

CT – Catalonia

FR – France

IT-Italy

UK – United Kingdom

NL-Netherlands





Contents

Ship toponomy

Port and starboard

Upper and lower hull

Entries and runs

Decks

Ladders

Bulwarks

Kitchens

Gunports

Hatches

Gratings

Cable tier

Fittings

Pumps

Pump sumps

Catheads

Capstans

Messenger cables

Bitts

Windlasses

Rudders

Anchors






Contents

Guns Types Nomenclature Carriages Tackles


Bells Belfrays

Barrels

Ship toponomy

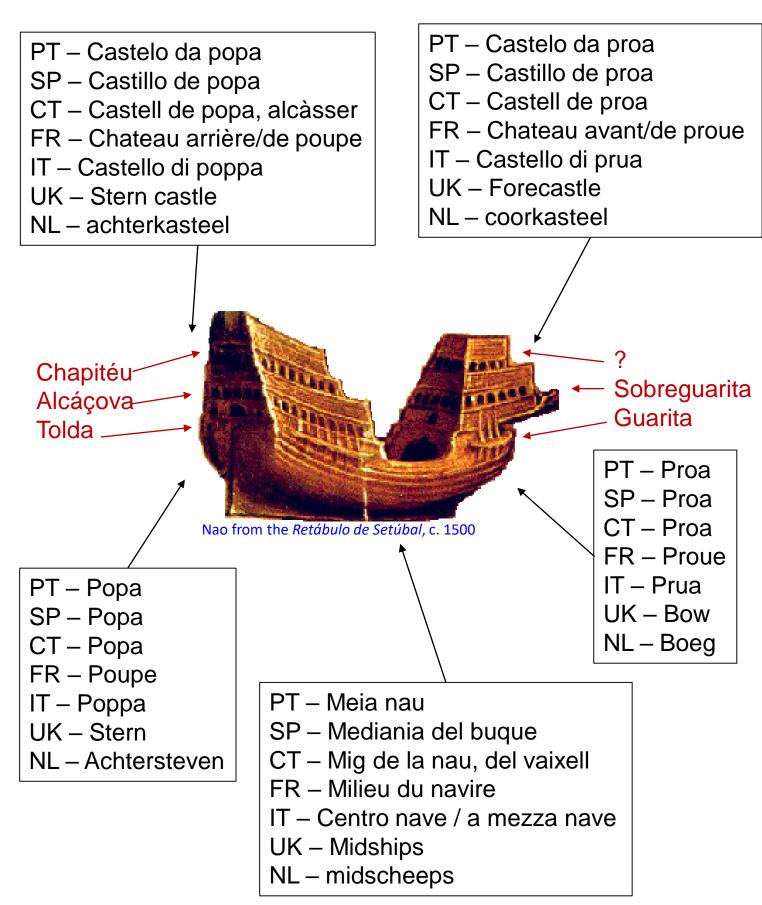

Port and Starboard

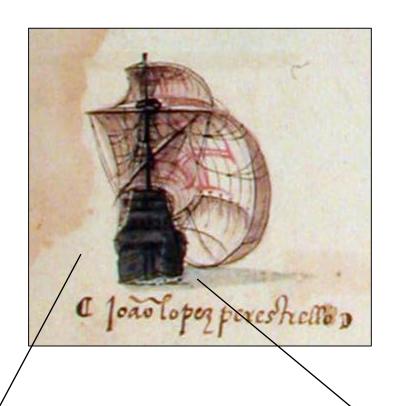

PT – Bombordo

SP - Babor

CT – Babord, senestra

FR - Bâbord

IT – Babordo, sinistra

UK - Port side

NL - Bakboord

PT - Estibordo

SP - Estribor

CT – Estribord, destra


FR – Tribord

IT – Tribordo, dritta

UK - Starboard side

NL - Stuurboord

Upper and Lower Works

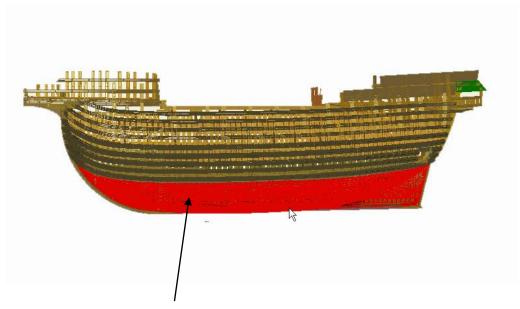

PT - Obras vivas

SP - Obra viva


CT - Obra morta

FR - Oeuvres vives

IT - Opera viva

UK - Upper works

NL - bovvenwatergedeelte

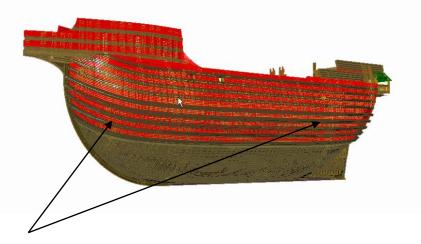

PT – Obras mortas

SP - Obra muerta

CT - Obra viva


FR - Oeuvres mortes

IT - Opera morta

UK - Lower works

NL – onderwatergedeelte

Entries and runs

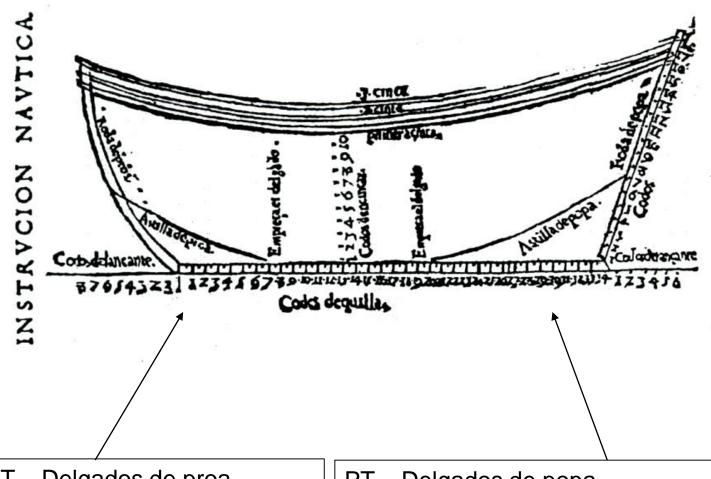

PT – Delgados de proa

SP – Delgados de proa, astilla

de proa, rasel

CT – Estella de proa

FR – Entrée (de la carène)

IT -

UK - Entries

NL - Voorschip

PT – Delgados de popa

SP – Delgados de popa, astilla de

popa, rasel


CT – Estella de popa

FR – Coulée (Pasch – 19th cent.)

IT -

UK - Runs

NL – Lijnen

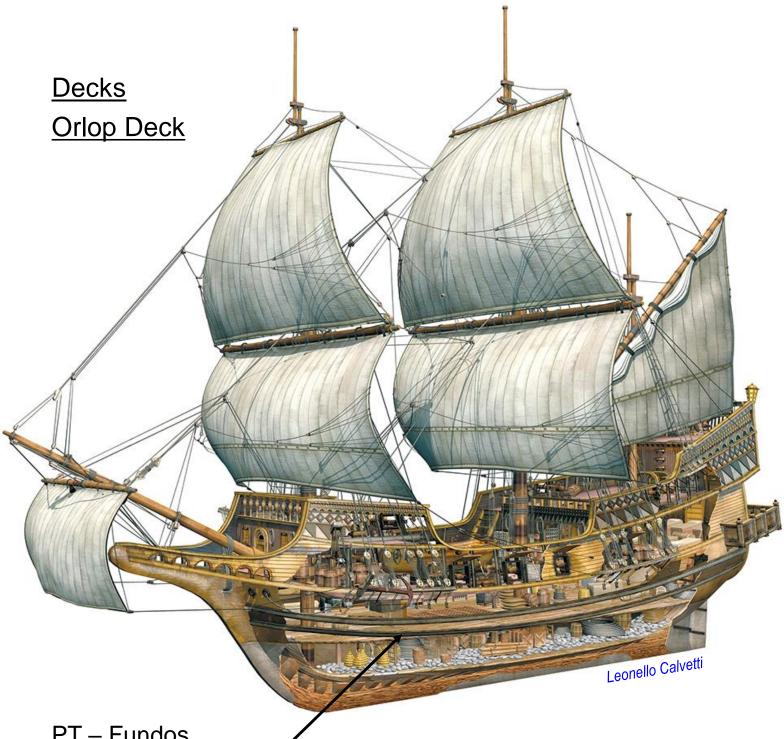

PT - Fundos

SP - Baos vacios (sollado)

CT – Falsa coberta

FR – Faux pont


IT -


UK – Orlop Deck

NL – middendek/kuildek



Cais do Sodré shipwreck beam.

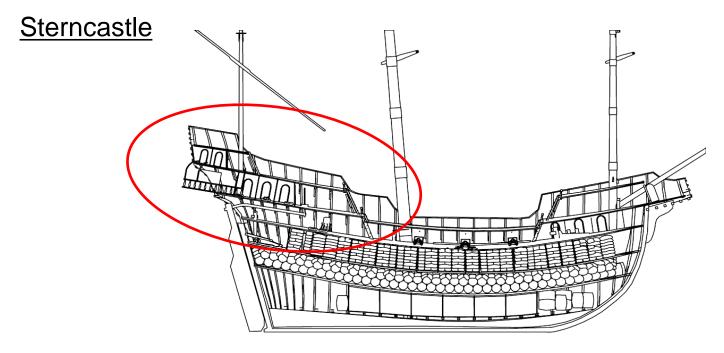

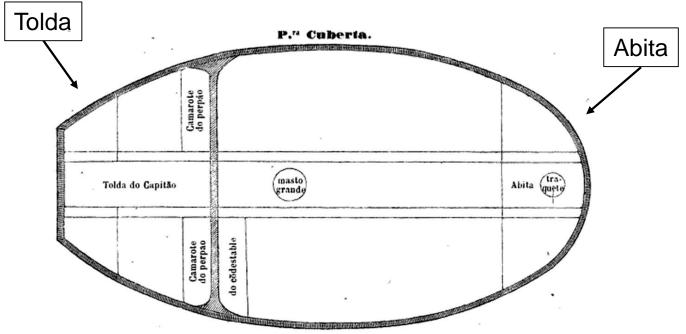

PT - Castelo da popa, tolda

SP - Castillo de popa


CT - Castell de popa, alcàsser

FR - Château arriere/de poupe

IT - Castello di poppa

UK - Sterncastle

NL – achterkasteel

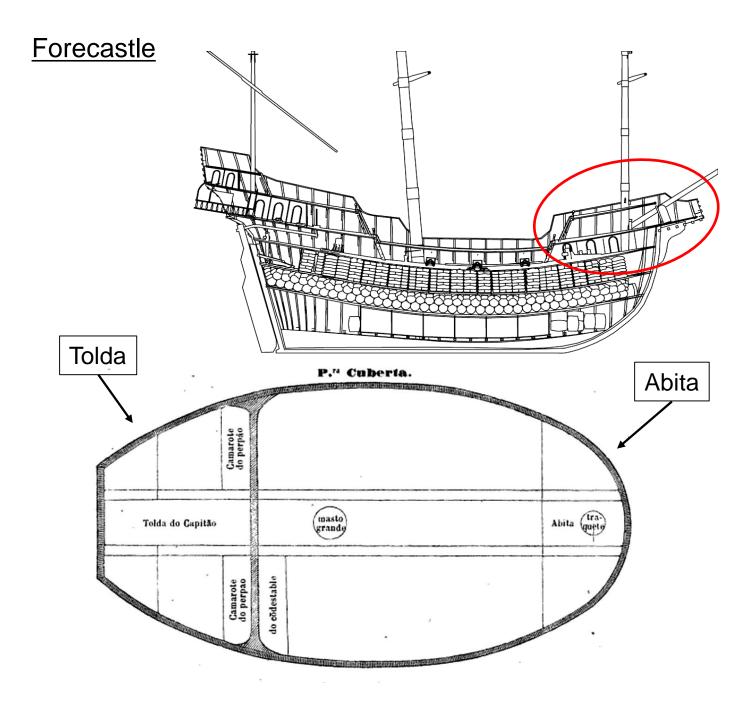

PT - Castelo da proa, abita

SP - Castillo de proa


CT - Castell de proa

FR - Château avant/de proue

IT - Castello di prua

UK - Forecastle

NL - voorkasteel

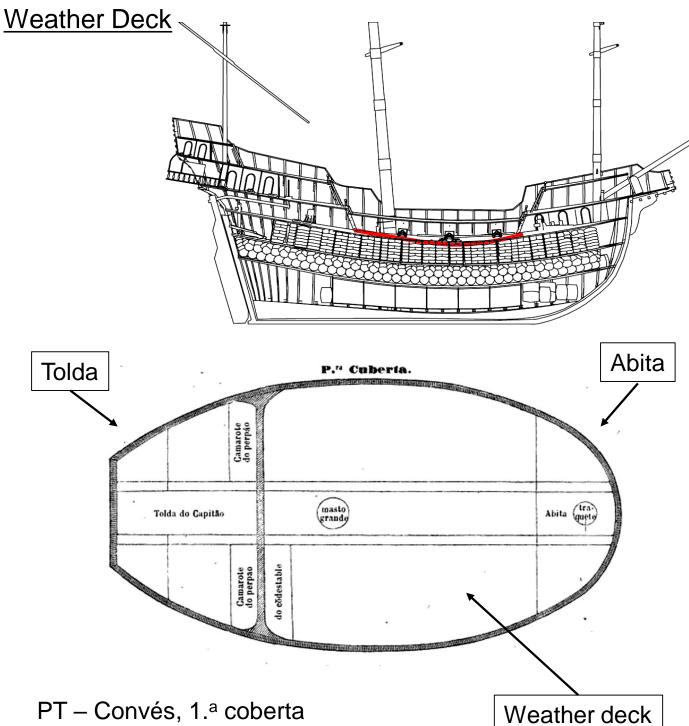

PT - Convés, 1.ª coberta

SP – Combés, Puente, cubierta superior

CT - Coberta, coberta superior

FR - Pont supérieur

IT – Coperta, ponte superiore


UK - Weather deck


NL – opperdek

3D Model: A. Wells

1607 Figueiredo Falcão

Gun Deck

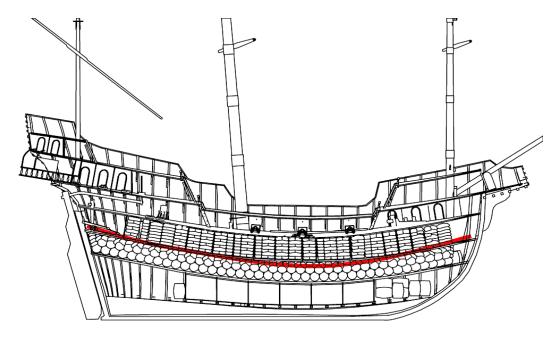

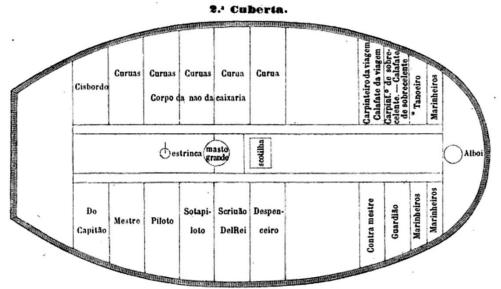

PT - 2.ª Coberta

SP - Primera Cubierta

CT - Segona coberta

FR – Deuxième (2nd) pont


IT -


UK – Upper deck

NL – bovendek

In Portugal the decks were counted from the weather deck down.

Lower Deck

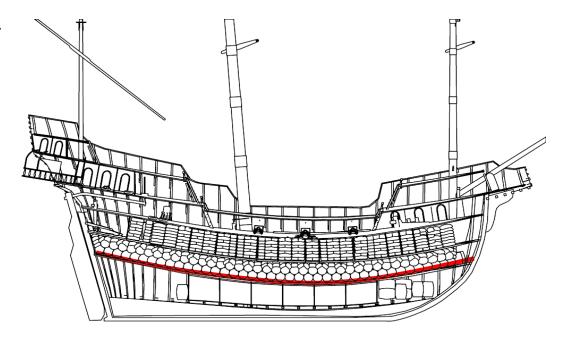

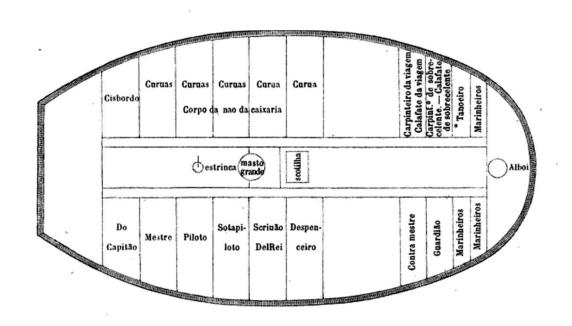

PT - 2ª Coberta

SP – Segunda Cubierta

CT - Primera coberta


FR – Premier (1st) pont


IT -

UK - Lower deck

NL – kuildek

<u>Hold</u>

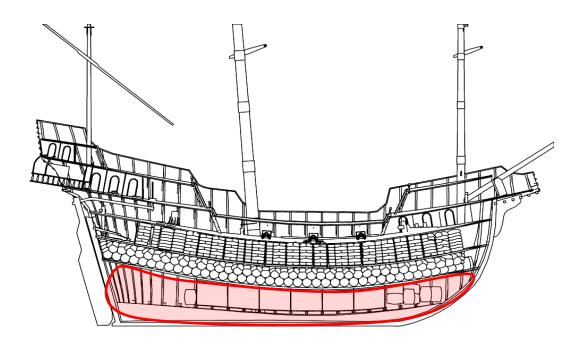

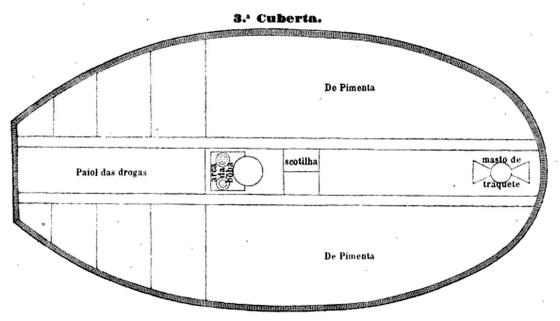

PT – Porão, 3ª coberta

SP – Bodega


CT - Cala, pallol

FR - Cale

IT – Stiva

UK - Hold

NL - ruim

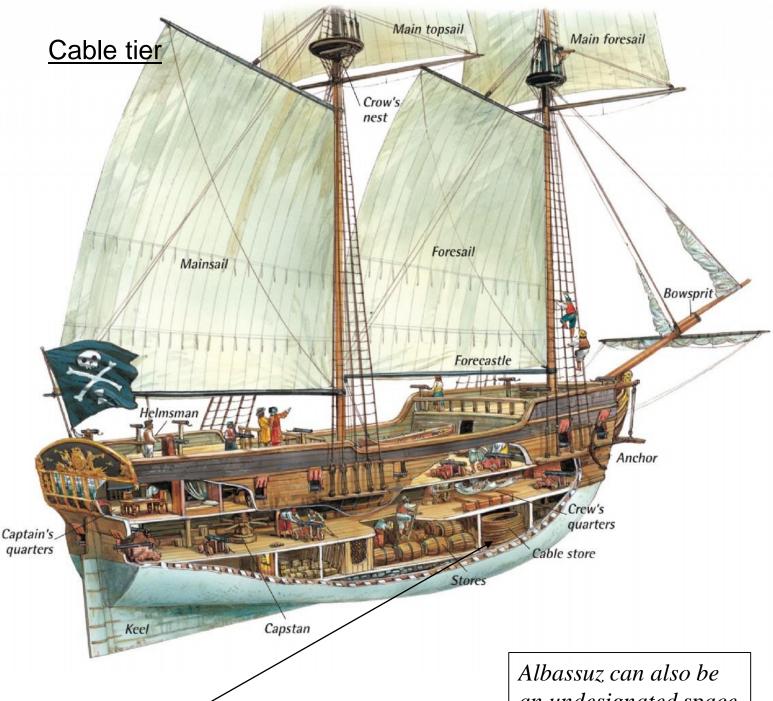

PT – Albassuz, Alvaçus

SP - Pañol de los cabos, de cables

CT – Pallol dels caps

FR - Soûte à cable(s)


IT – Fossa delle gomene

UK - Cable Tier

NL - Kabelgat

an undesignated space below decks.

Bulwarks

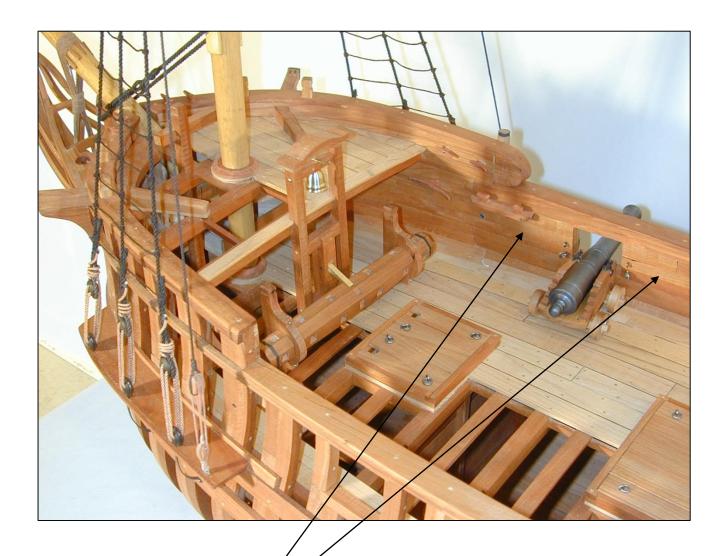

PT – Amurada

SP – Amura, macarrón, borda

CT – Macarrons, estamenots


FR - Pavois

IT – Bordo

UK - Bulwarks

NL - verschansing

Deck cover

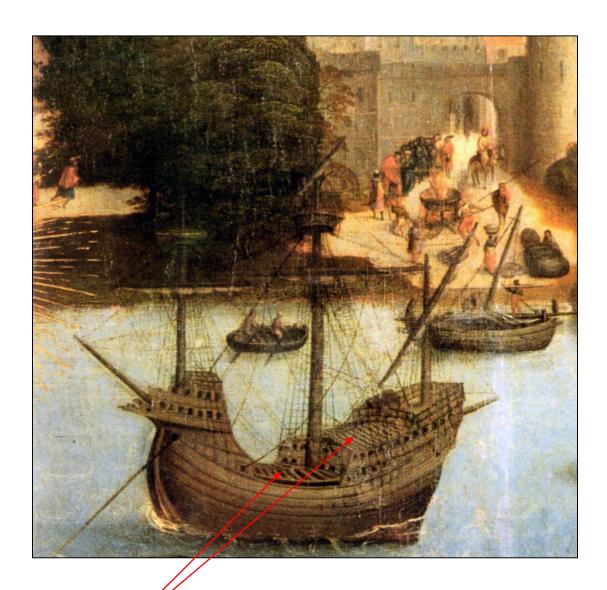

PT – Xareta

SP-

CT-


FR - Abri de pont(s)

 IT -

UK –

NL – boevennet

Ladders

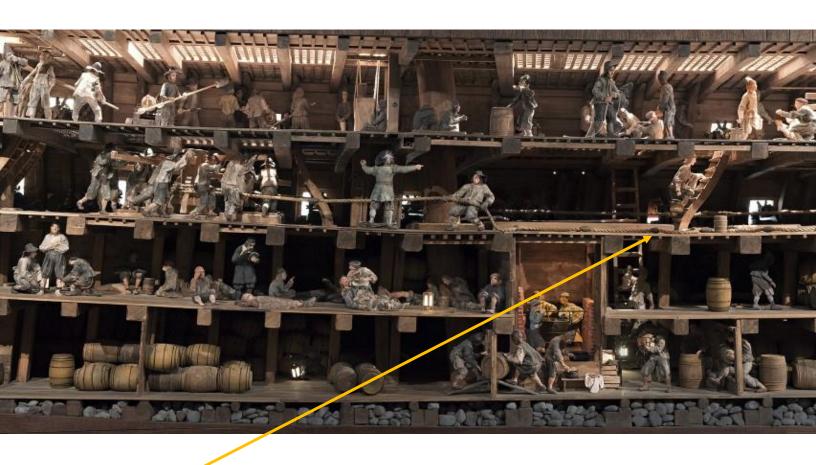

PT – Escada(s)

SP - Escala(s),

escalera(s)


CT – Escala, escale(s)


FR - Échelle(s)

IT - Scaletta


UK – Ladder(s)

NL - ladder/trap

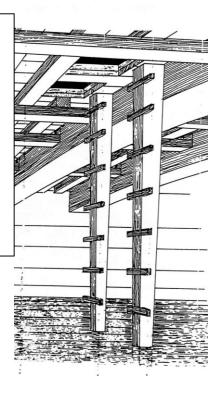

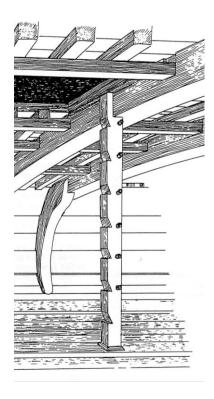

Kitchens / Ovens

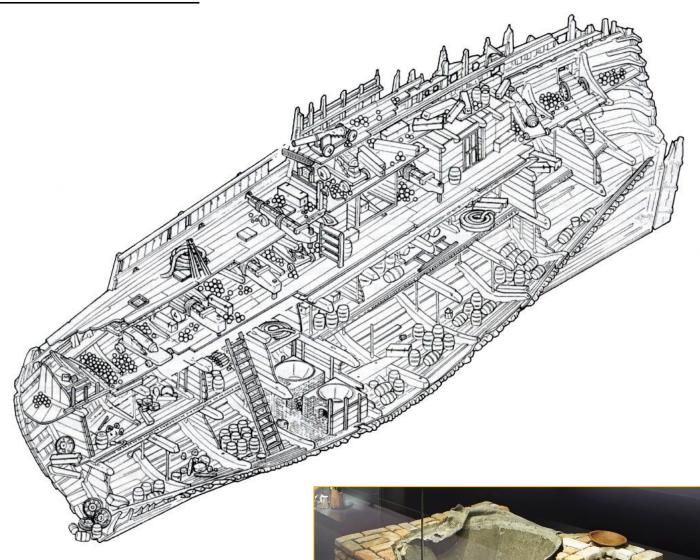

PT - Cozinha(s) / forno(s)

SP - Cocina(s) / horno(s)

CT – Cuina, fogó, forn


FR - Cuisine(s) / four(s)

IT - Cucine / forni


UK - Kitchen(s) / oven(s)

NL – kombuis / oven

Gunports

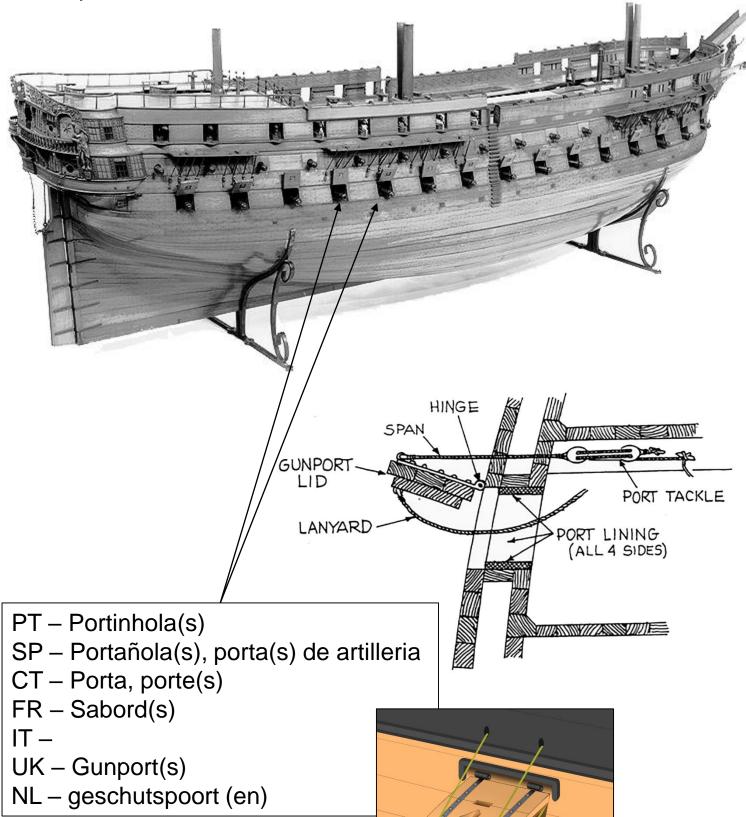

Hatches

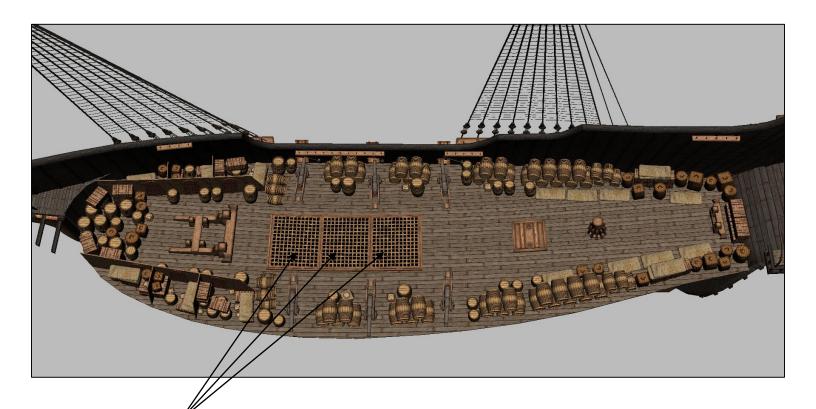

PT - Escotilha(s)

SP - Escotilla(s)


CT - Escotilla, escotille(s)

FR – Écoutille(s)


IT - Portello

UK - Hatch(es)

NL – luiken

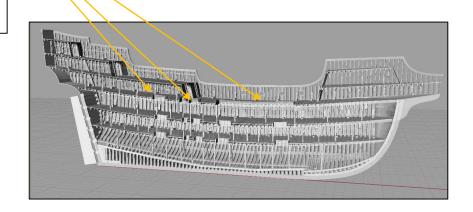

Gratings

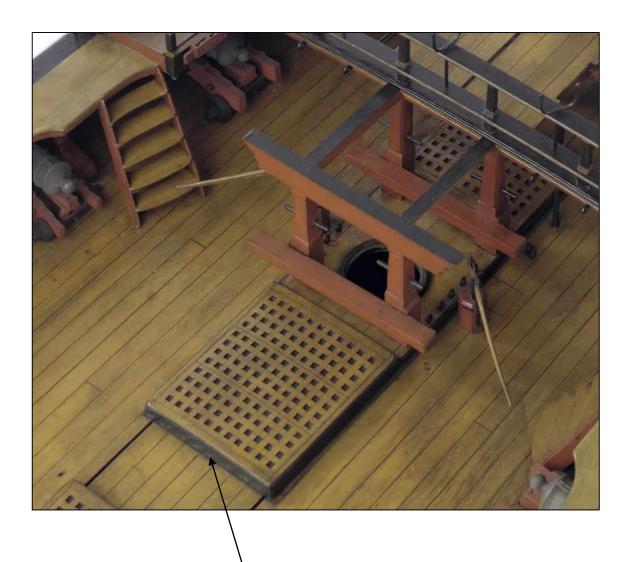

PT - Grades?

SP - Rejilla, jareta, enjaretado

CT - Gelosia


FR - Cailleboti(s)


IT –


UK – Gratings


NL - Rooster

Ship fittings

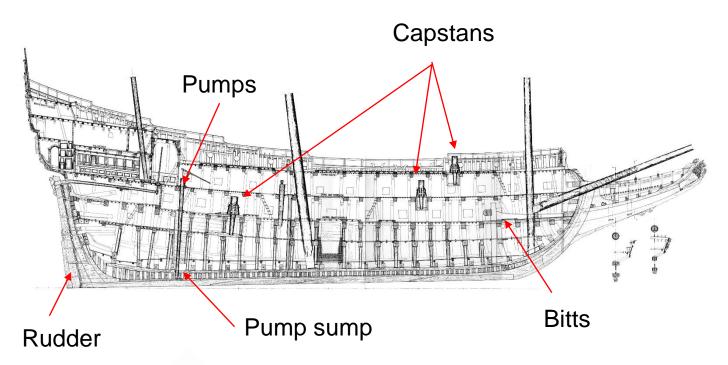

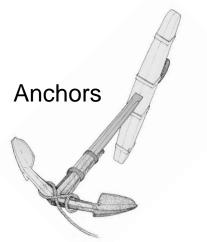


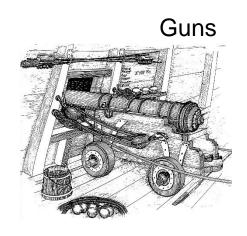

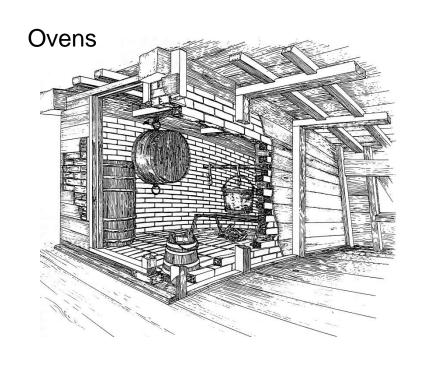

Vasa and Prins Willem

Bitts

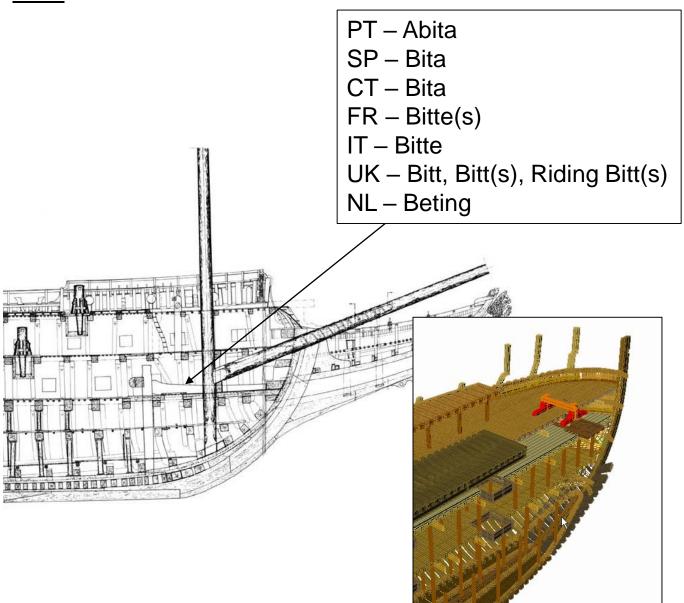

Pumps



PT – Bomba(s)

SP – Bomba(s) de sentina

CT – Bomba, bombe(s)


(medieval catalan: trompa)

FR - Pompe(s)


IT – Pompe?

UK – Pump(s)

NL - Pomp (en)

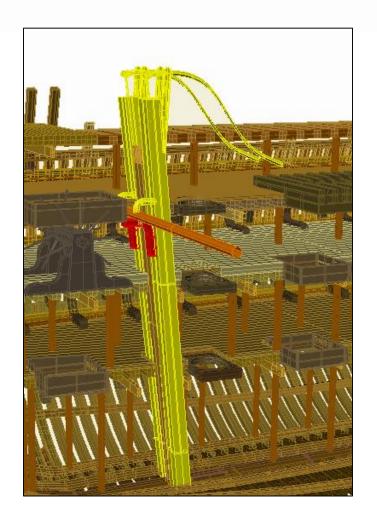

Pump sumps

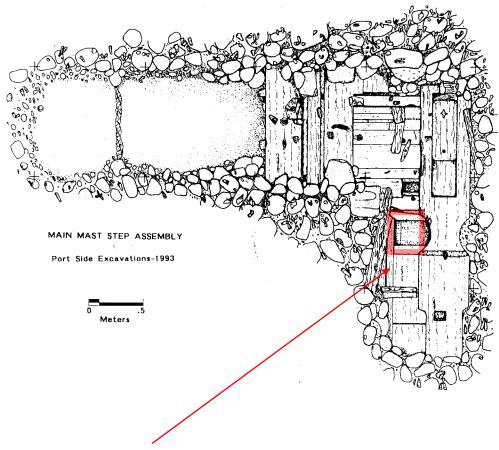

PT – Poço da bomba

SP - Pozo de bomba, sentina

CT – Pou de la bomba

FR – Pompe de puisard

IT –

UK – Pump sumps

NL – Pomp Put

3D Model: Alex Hazlett

Catheads



PT – Turco do ferro

SP – Serviola (con aparejo de gata)

CT –

FR - Bossoir

IT -

UK - Catheads

NL - Kraanbalk

A horizontal beam extending from each side of a ship's bow, used for raising and carrying an anchor.

3D Model: Alex Hazlett

Capstan



PT - Cabrestante

SP - Cabrestante

CT - Cabrestant, argue

FR - Cabestan

IT - Barbotin


UK – Capstans

NL – Kaapstander



Messenger cable


Anchor cable

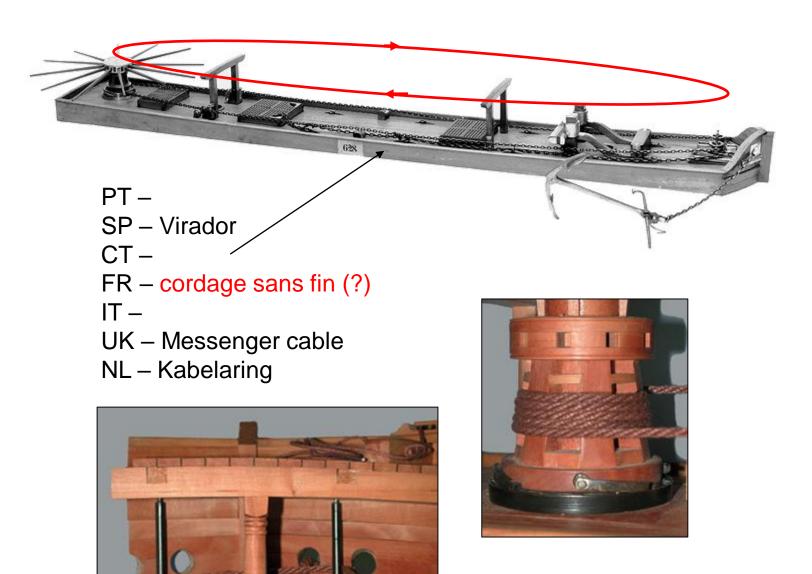

Messenger cable

Glenn Grieco model Rijksmuseum model

Windlass

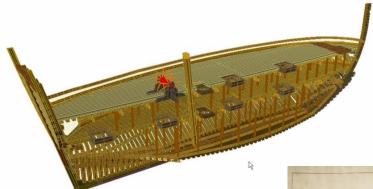

PT - Estrinca

SP - Molinete

CT – Torn

FR - Treuil, guindeau


IT - Argano? Salpancora?

UK - Windlass

NL - Braadspil



1616, Manoel Fernandez

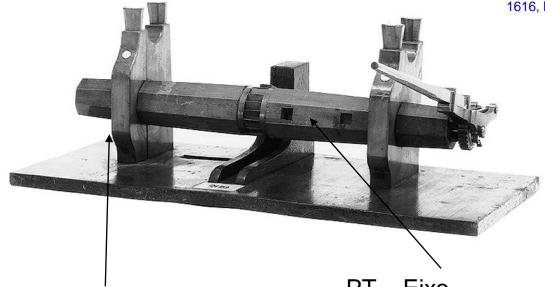

PT - Roda

SP - Bitas, puntales, o

pies del molinete

CT - Roda

FR – Bitte(s) latérale(s)

IT -

UK - Windlass bitt

NL – Braadspilbeting

PT - Eixo

SP - Asso

CT – Eix


FR - Tambour

IT –

UK – Drum


NL - Rol

3D Model: Alex Hazlett Rijksmuseum model

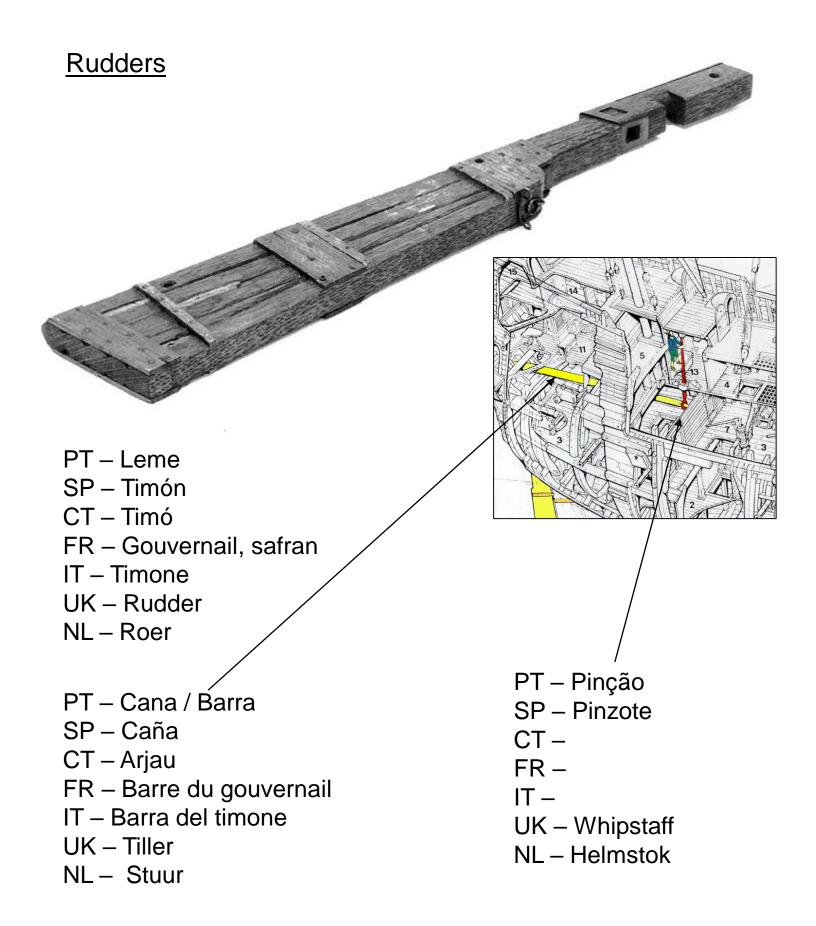

3D Model: Alex Hazlett

Rudders

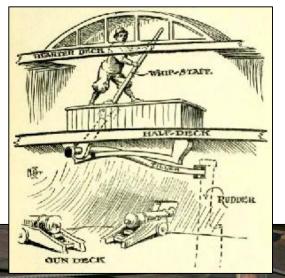



– Cana

SP – Caña

FR – Barre du gouvernail

IT - Barra del timone



PT – Pinção

SP – Pinzote


CT -

FR -

IT -

UK - Whipstaff

NL – Helmstok

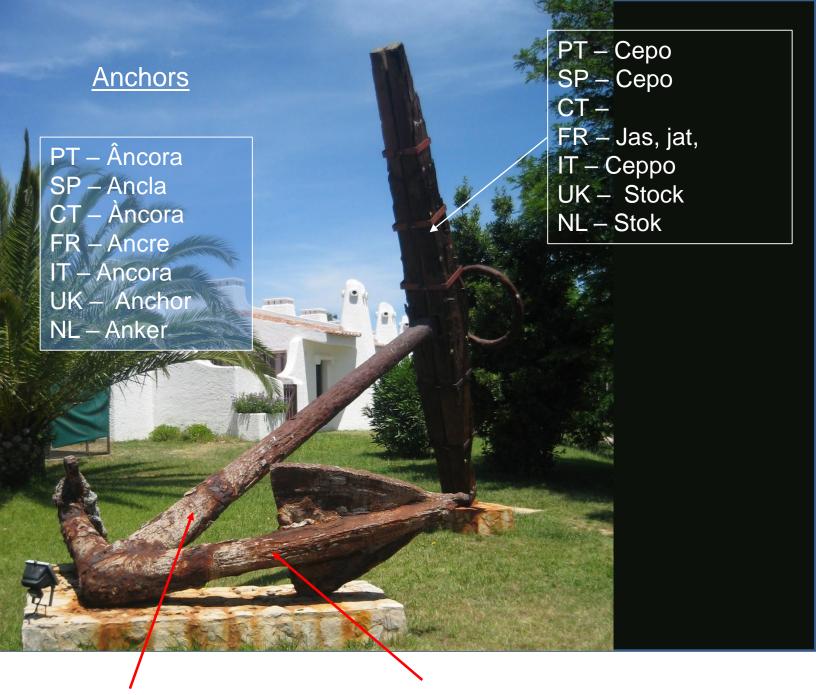

PT - Haste?

SP - Caña

CT - Canya

FR – Verge, vergue

IT - Fuso

UK - Shank

NL - Schacht, roede

PT-

SP - Brazo

CT - Marra

FR - Bras, branque

IT - Marra (e)

UK – Arm

NL – Arm, armen

Anchors



PT – Unha?

SP – Pico de loro

CT – Bec

FR - Bec

IT - Unghia

UK - Bill

NL - Punkt

PT - Unha

SP - Mapa, Uña

CT - Mapa, ungla

FR - Pelle, oreille, patte

IT - Patta

UK - Fluke, flook

NL - Ankerhanden

PT - Cruz?

SP - Cruz

CT –

FR - Diamant

IT - Diamante

UK - Crown

NL - Ankerkruis



Anchors

PT – Arganéu / Anete?

SP - Arganeo

CT - Arganell

FR - Anneau, organneau

IT - Anelli / Cicala

UK - Ring

NL – Ankeroog

PT - Noz? Chaveta?

SP - Encepadura, macho


CT -


FR - Chevilles de fer

IT —


UK - Nut


NL - Neut

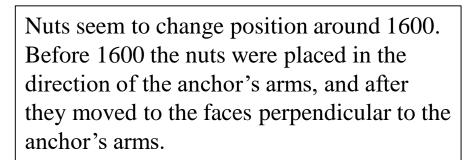

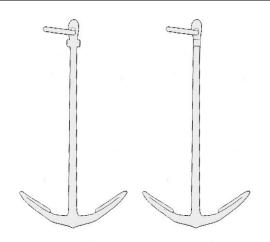

Guns

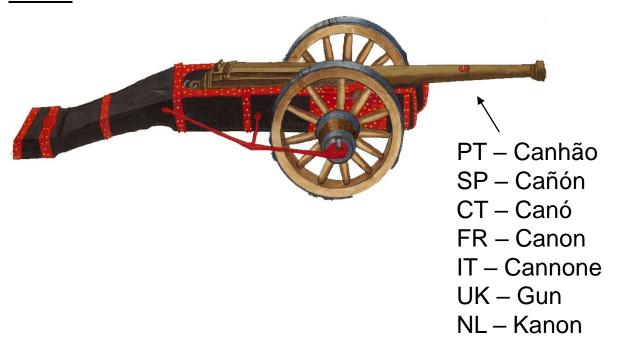

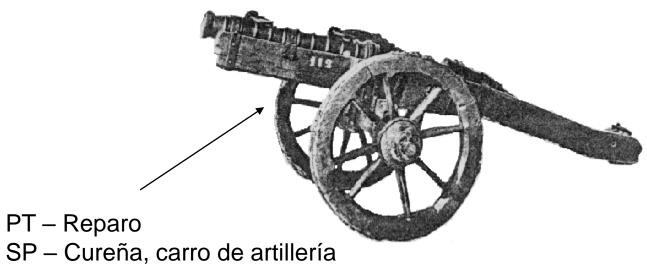


CT –


FR – Affût

IT - Affusto


UK - Gun carriage

NL - Affuit, Rolpaard

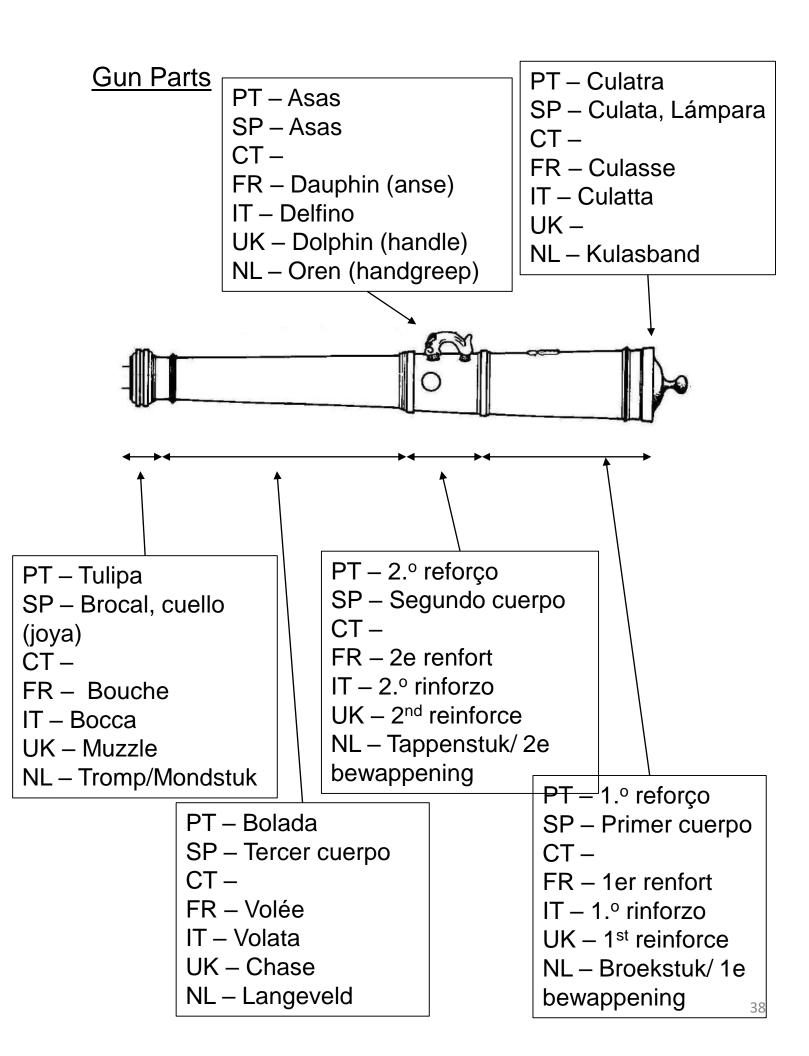


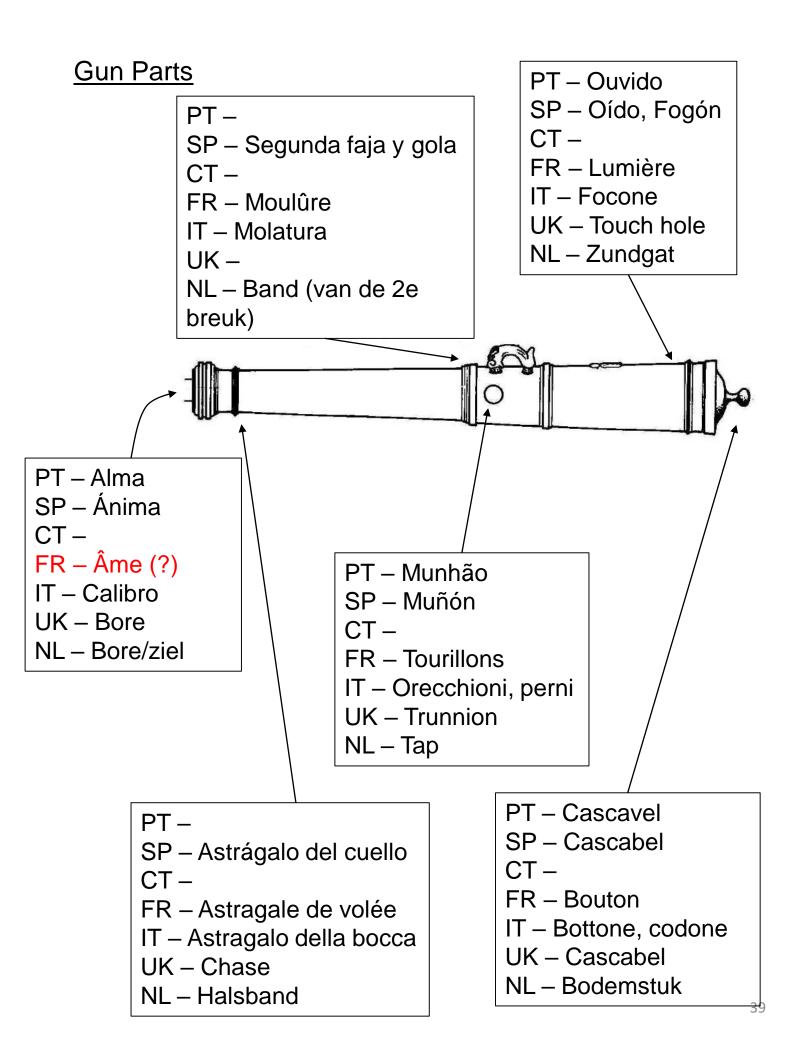

Gun Parts

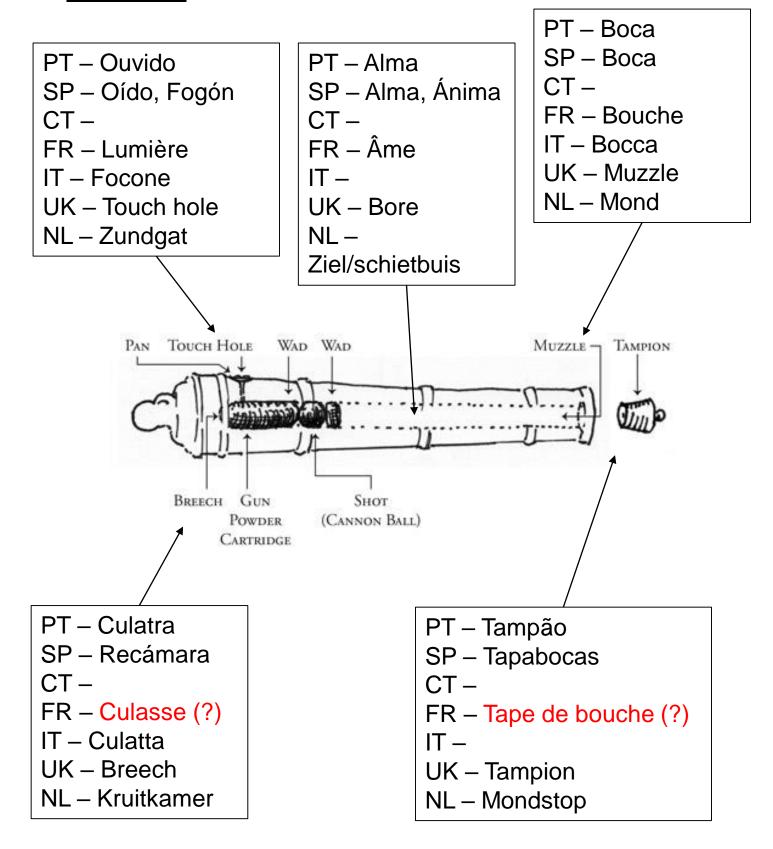

Gun Parts

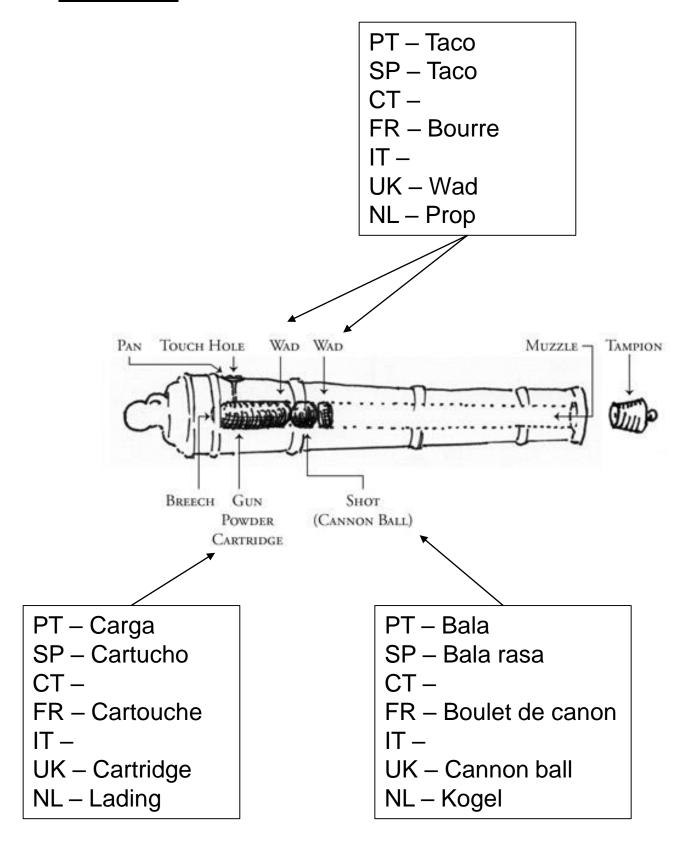

Gun Parts

PT - Haste

SP - Rabera, rabiza

CT-

FR -

IT –

UK-

NL-

PT – Berço, falconete

SP - Verso, falconete


CT-

FR - Fauconneau

IT -

UK - Falconet

NL - Falconet

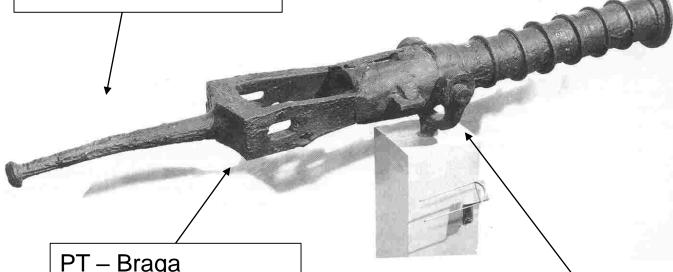

PT – Braga

SP – Recámara

CT -

FR -

IT -

UK -

NL-

PT - Peão

SP - Horquilla

CT-


FR - Fourche

IT -

UK -

NL-

Gun Carriages

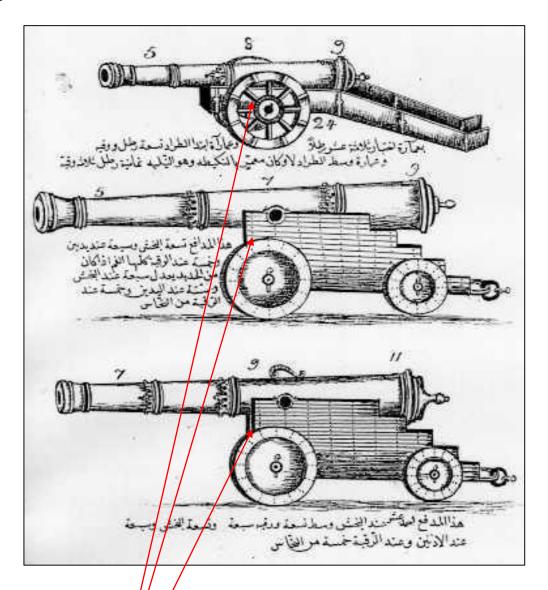

PT – Reparo

SP - Cureña

CT - Curenya

FR – Affût

IT – Affusto

UK – Gun carriage

NL – Affuit

Gun Tackle

PT – Aparelho / Equipamento de força

SP – Palanquín (y braguero, No. 9)


CT -

FR - Palan de canon

IT -

UK - Gun tackle

NL - Geschuttaile

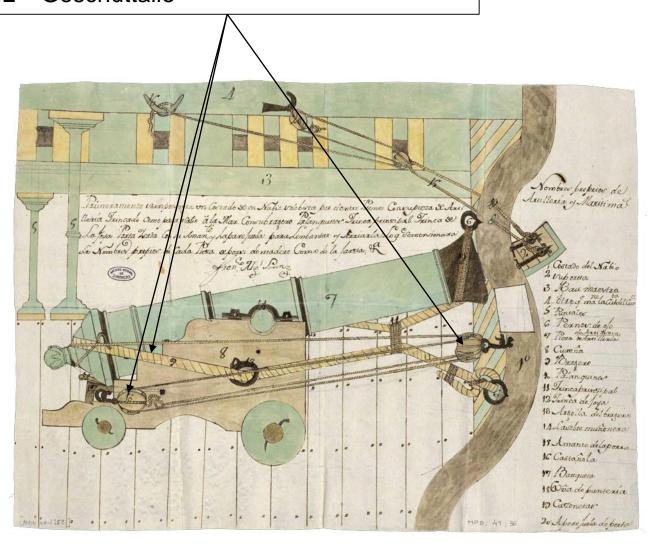

Portugal

Pedreiro: bore length = 7-13 Ø; stone balls;

Selvagem Ø 20 cm or more

Canhão: bore length = 18-25 Ø; stone balls;

Colubrina: bore length = 24-50 Ø;

Colubrinas legítimas: bore length = 30-50 Ø;

Colubrinas bastardas: bore length = 24-30 Ø;


Peças de braga:

Falcões Ø = 12 cm

Cães Ø = 8 cm

Berços $\emptyset = 5$ cm

Falconetes Ø =

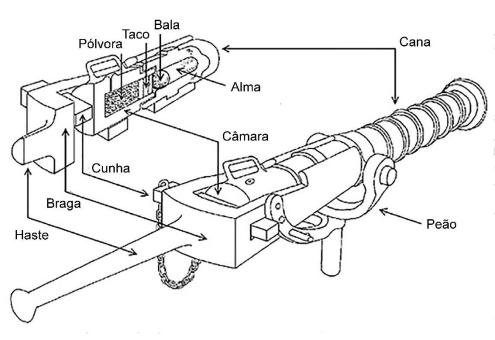

PT – Bombarda

SP – Bombarda

CT – Bombarda

FR - Bombarde

IT –

UK - Bombard

NL-

Bombarde/pothond

Ø +/- 20 cm





PT - Canhão de retrocarga

SP - Bombardeta


CT - Bombardeta

FR - Petite bombarde

IT -

UK -

NL - (kleine) bombarde

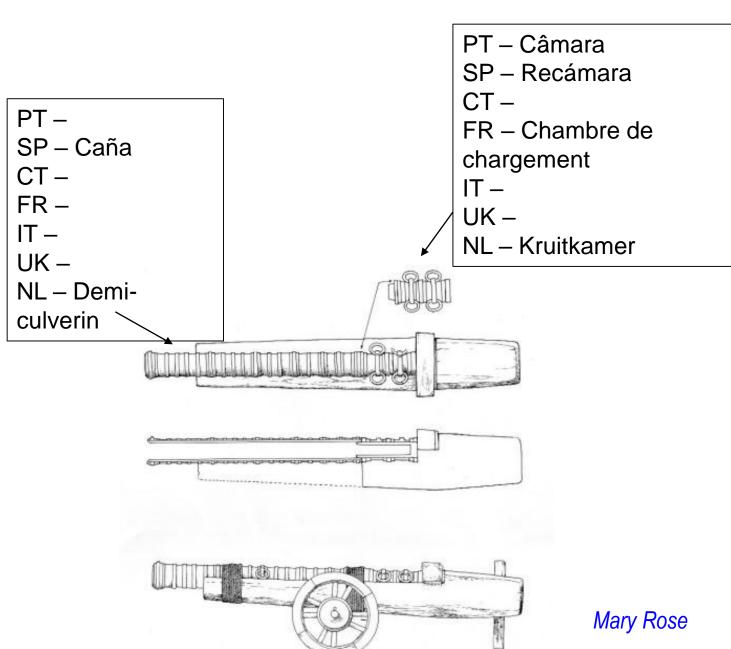



Bore length = $18-25 \, \emptyset$; stone balls.

PT - Canhão

SP – Cañón

CT -

FR - Canon

IT –

UK - Cannon

NL - Kanon



Bore length = $24-50 \ \varnothing$

PT - Colubrina

SP - Culebrina

CT –


FR – Couleuvrine

IT -

UK - Culverin

NL - Veldslang

Bells

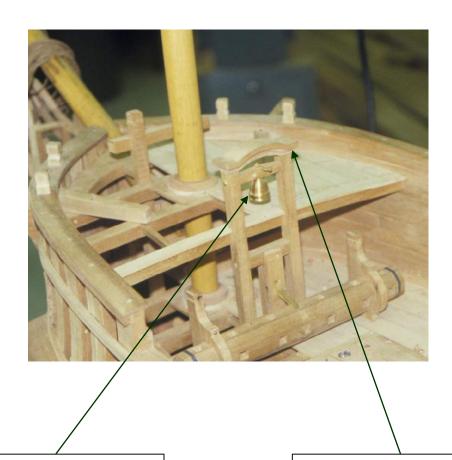

PT – Sino

SP – Campana

CT - Timbre

FR - Cloche

IT – Campana

UK – Bell

NL – Scheepsbel

PT –

SP-

CT-


FR -

IT –

UK – Belfry

NL – Klokhuis

Barrels

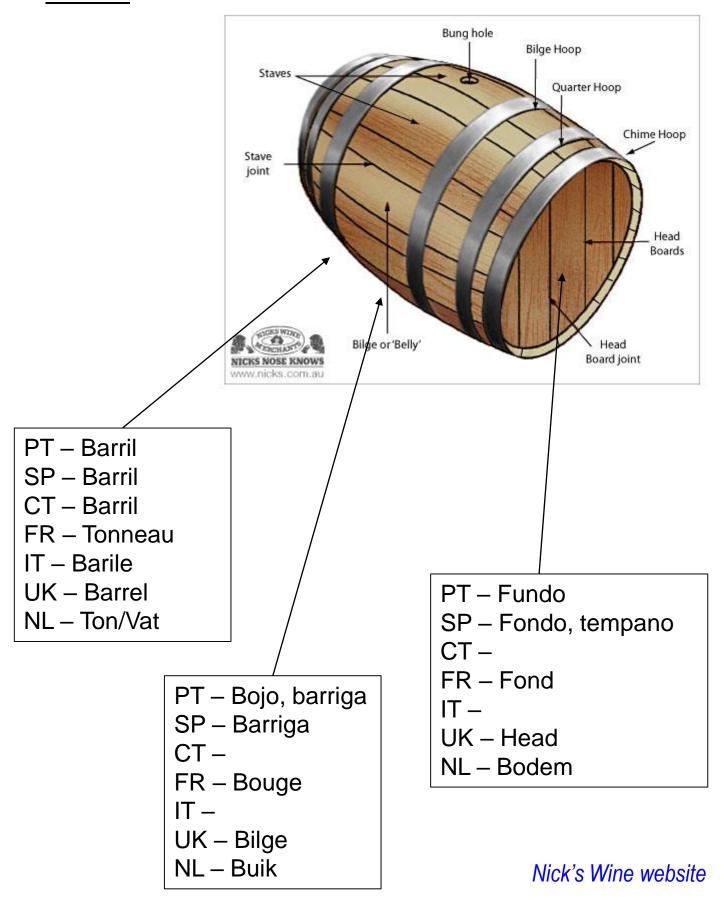

Barrels

PT – Batoque e rolha

SP - Piquera y Tapón


CT-

FR - Trou de bonde

IT - Buco

UK - Bung hole

NL - Spongat

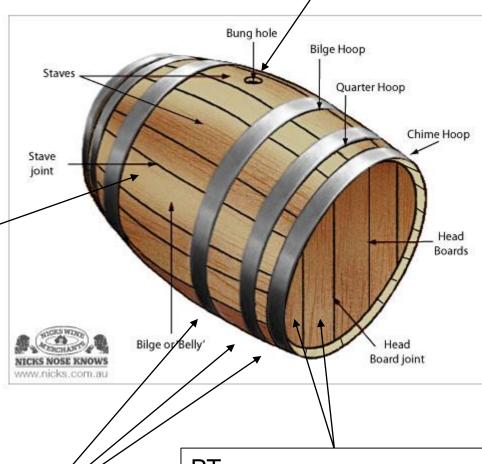

PT - Aduelas

SP - Duelas

CT-

FR - Douelles

IT -

UK - Staves

NL - Duigen

PT - Aros

SP - Remaches

CT-

FR - Cercles

IT -

UK - Hoops

NL - Hoepels

PT -

SP-

CT -

FR -


IT –

UK - Head boards, cants

NL – Bodemplanken

Nick's Wine website

Barrels

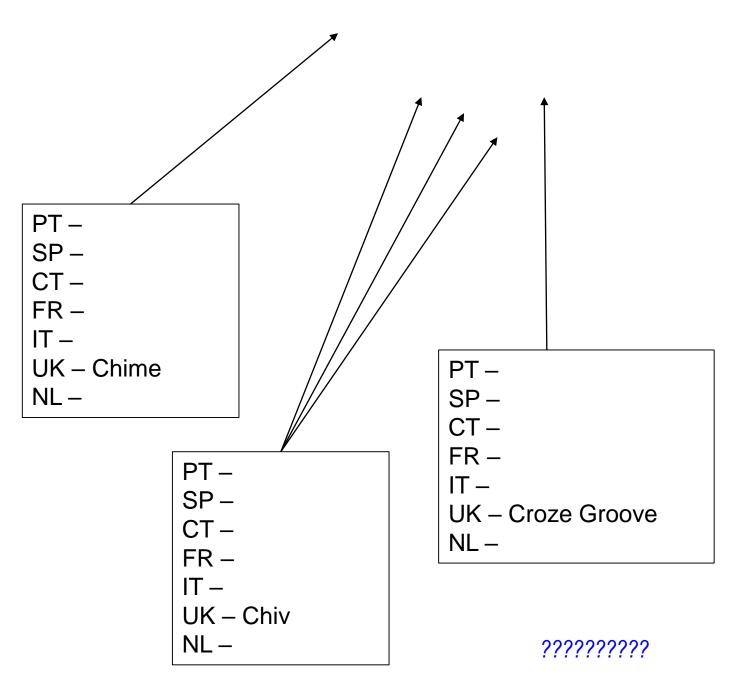

Contributions:

Filipe Castro, Alexander Hazlett, Maria João Santos, Marijo Gauthier-Bérubé, Massimo Capulli, Ricardo Borrero, Beñat Eguiluz Miranda, Pere Izquierdo i Tugas, Marcel Pujol Hamelik, Jean-Michel Urvoy, Greg Votruba, Horst Liebner, Nicolás Ciarlo, Ivor Mollema.

